

TERMITE BAIT STATION SELF CHECK

Termite bait stations are designed to detect termite activity before they attack your home. This flyer is to help provide you with the necessary knowledge to reduce termite attacks and protect your asset investment.

You have chosen to install termite stations as part of your ongoing termite management plan and to self-check these stations. Stations need to be checked on a regular bases - minimum 3 monthly to detect termite activity.

To Check:

- Lift lid of station slowly and gently, visually check active rod (white) and timbers for evidence of activity.
- Should you see activity of feeding on active rod. Do not disturb or move. Termites need to feed on the rod, some species may take longer to feed than others.
- If signs of significant feeding or rod is at the stage as show in the photos contact Pestaway 07 4055 1055 to arrange for a technician to attend and rebait the station.

To Maintain

- Arrange annual cleaning of stations via Pestaway.
- A termite baits station program is one part of your ongoing termite management plan. Pestaway recommends that regular visual termite inspection are undertaken at your property.



Termite baiting is not an instance process and takes times. It is designed to help detect and eradicate colonies.

Self-checked stations do not carry a warranty and you will be responsible for regularly checking for signs of activity and contacting Pestaway for treatment and rebaiting. We know life can be very busy and sometimes hard to keep up with everyday home maintenance. Pestaway can provide a termite bait station monitoring service. Call for further information.

PO Box 189 Stratford QLD 4870 E: belinda@pestaway.net.au
Phone: 07 4039 3000 Mobile: 0434 744 971
Website: www.pestaway.net.au
ABN: 700 8557 1731 QBCC: 735256

